

# FastlightsLEDs

## FastlightsLEDs G2 Remote Control Keyfob programming

Your new Keyfob needs to be programmed to the controller. This is a very simple task that can be accomplished by following the following instructions.

- 1.) The Control Module must be connected to 12R 24 volt power supply.
- 2.) Press and release the small programming button (shown below)
- 3.) Press the on/off button on the Key fob ("A" button shown below)
- 4.) While pressing the "A" Button press the small programming button on the circuit board inside the controller.
- 5.) If the procedure does not work the first time, repeat same procedure.  
Sometimes it takes two or three times to get the Key fob to synchronize.

It is important to note that on the G2 System only one unique key fob may be programmed to a controller at a time.

\*\* If your G2 control box does not have this button inside simply disconnect from power, connect to power and within 3 seconds of connecting to power press and hold the "A" button on the remote. The lights will blink 3 times when your new remote is programmed.

